




HD Dashboard Camera

Instruction Manual

Thank you for purchasing Xtreme HD Dashboard Camera. In order to help you operate it correctly, please read these instructions carefully before using.

Product Picture and Function

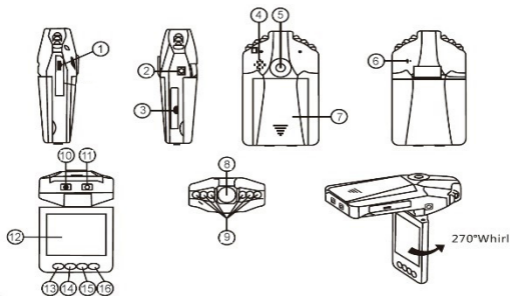

1. USB Port
2. Memory Card Slot
3. Speaker
4. Mount hole
5. Microphone
6. Battery cover
7. Lens
8. IRLED
9. ON/OFF Power Switch
Charging (Red) indicator
10. REC/PHOTO
Working (Blue) indicator
11. 2.5 inch Color LCD
12. Menu
13. Down
14. Up
15. Mode Button

Included Accessories

- Manual
- Suction Cup Mount
- USB Cable
- Car Charger (Include the adaptor 12V/24V transfers to 5V)

Operate and Recording

Connecting with the car charger will turn the dash cam on and start recording automatically when the car turns on. To stop recording, turn off the car. Device must be plugged into DC port in order to function.

Recording

Dash cam will enter into default recording mode when it is turned on, the indicator blinks to show it is recording. The recording file is saved in the SD/MMC Card. To stop, press **Recording Button** (11) or turn off car.

Camera mode

Turn on the dash cam and press **Mode Button** (16) to enter into Camera mode. To take photos press the **REC Button** (11)

Preview and Delete

Turn on the dash cam and press **Mode Button** (16) three times to enter into Preview Mode, Press **Up** (15) or **Down** (14) to select the previewed file. If it is a video file, it can play or stop by pressing **REC Button**. If you want to delete it, press **Menu Button** (13) to enter into delete mode, and then, select All or Select by REC Button and UP/Down and confirm to delete the file by press Rec Button, Also can select Thumbnail mode and volume (from 1 to 8) under the Preview Mode.

Setting the functions:

Turn on the dash cam and press **Menu Button** under Video mode or Camera mode to enter into settings menu. Confirm by **REC Button** and select by Up/Down for the following setting. Press **Menu Button** again to exit after finished.

A. Video mode:

1. **Size:** Select [720x480/640x480pixels]
2. **Time Stamp:** Select Off | Date only/ Date &Time
3. **Motion Detect:** Select On/Off
4. **Recording time:** select [1/3/5/10] minutes to select recording intervals.
5. **Audio Record:** Select On/Off
6. **Motion Detect Sensitivity:** Select High/Normal/Low

B. Camera mode:

1. **Size:** 1.3 MIVGA

C. Setting Mode:

Whether under Video mode or capture mode, press **Menu Button** twice to enter into **Setup** screen.

1. **Format:** Select it if you want to format the Memory Card.
2. **Language:** Select [English/Chinese/Japanese/Russian]
3. **Auto Off:** Select [Off- 1/3/5 minutes]
4. **System Reset:** Select [Cancel or Execute system] reset.
5. **Light Frequency:** set [50/60Hz].
6. **Date Input:** Set correct recording Date and time by **Rec Button** and **Up/Down Button**.

USB Mode

Connect dash cam with computer by USB cable, Open up your file explorer and select removable disk, the file is stored in Removable Disk/ DCIM/100DSCIM. From here, the files of the dash cam can be downloaded to the computer.

Note:

- 1) Please insert the memory card before recording.
- 2) This dash cam records in cycles if you choose 1/3/5/10 minutes as storage time. When the storage is full, it will record from the beginning again and erase over the previously recorded material automatically. It will have 3 seconds pause time, and contents in the 3 seconds will not record.

ATTENTION: Because the dash cam is DC5V input, please use included car charger. It converts from 12V/24V to 5V.

Technical Specifications

- 1) Recording resolution: 720x480/640x480 pixels
- 2) Video format: AVI
- 3) Repeat storage by section: 1/3/5/10 minutes
- 4) Power source: Built-in rechargeable battery or 12V/24V Car Charger
- 5) Supports SD/MMC card (From 1GB up to 32GB)
- 6) Microphone: can record sound
- 7) 2.5 inch LCD: 270" Swivel

Any other issues please contact customer support at:

www.xtremecables.com and click the 'support' tab

customerservice@xtremecables.com

855-999-8041